

Before you begin

These instructions illustrate the Stylmark AXIA extrusion profiles. AXIA can be installed starting from either the left, right or center of the wall. It's important to know that each AXIA profile has a nominal width of 4". You'll want to measure your wall and plan your starting point and end points accordingly.

Make sure every connector is secured to the wall using fasteners (obtain locally) that meet local building codes and are appropriate for the type of wall construction.


For wall switches, electrical outlets or any other cutout situations, please contact Stylmark for more information.

Tools you'll need


- Level
- Power Drill
- Screwdriver
- Measuring Tape
- Pencil

Please read these instructions carefully before beginning installation.


Stylmark Installation Instructions: AXIA™ Aluminum Extrusion Profiles

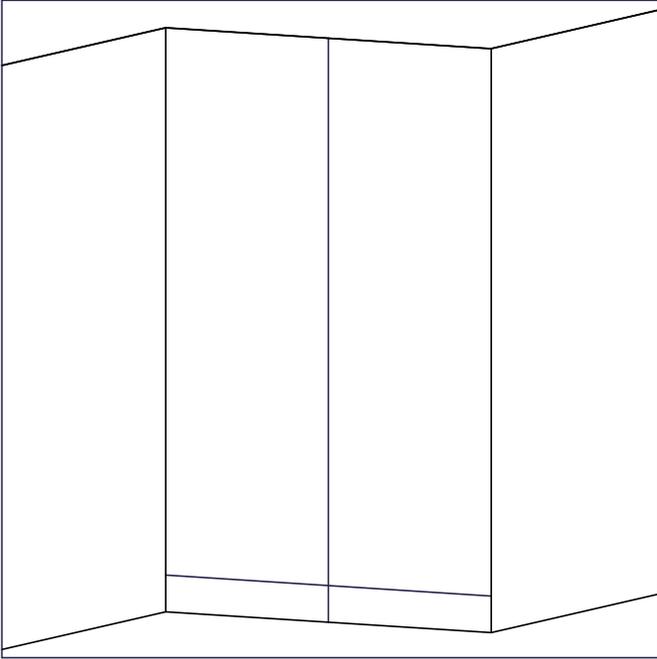


1) Draw a vertical line at the midpoint of the wall. If using an odd # of profiles, measure 2" to the left or right of the center line and begin there. Doing this will offset this first profile so each side is symmetrical.

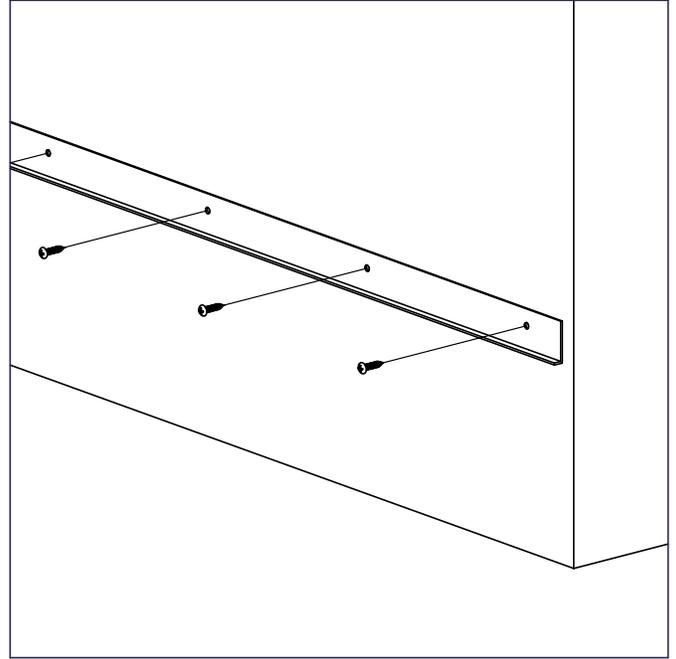

2) If the AXIA profiles will not rest directly on the floor or a baseboard, install an angle (or similar) to support the AXIA profiles.

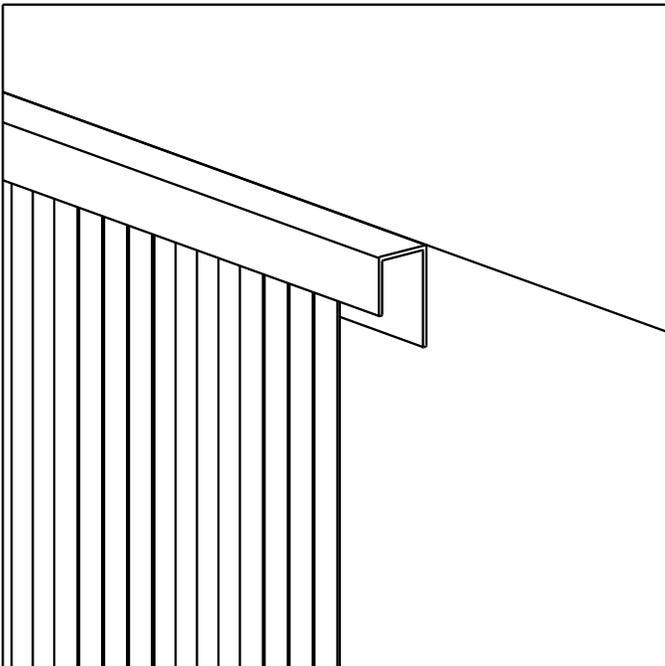


3) It is recommended to add a channel to the top of the wall to hide the cut ends. This could help ease installation since this method would allow rough cut sizes instead of having to precisely cut each piece if you have an uneven wall height.

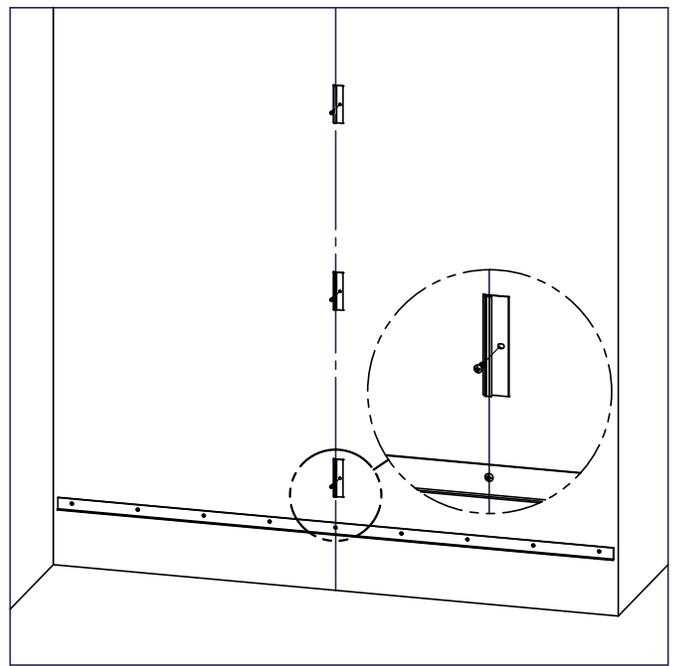


4) Using the vertical line as reference, install Intermediate Connectors as shown. Connectors should be installed 3-4" inches from each end of the AXIA profile and then spaced approximately 30-36" apart.


Stylmark Installation Instructions: AXIA™ Aluminum Extrusion Profiles

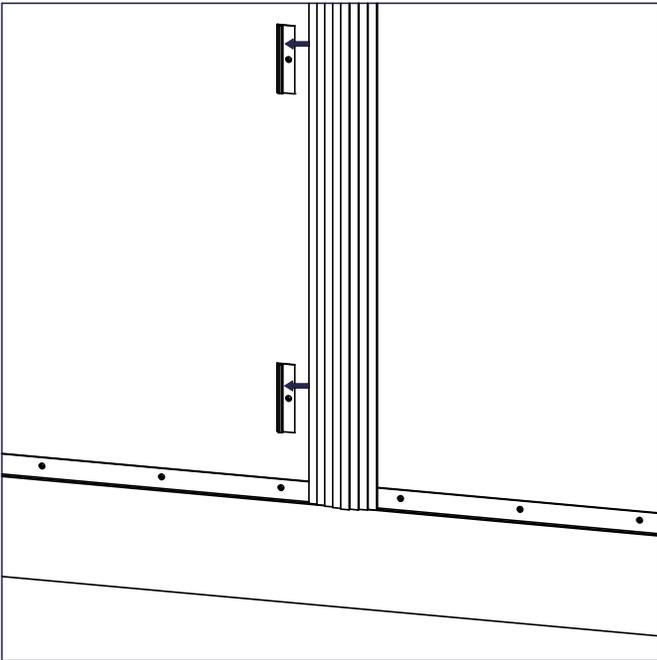


5) Slide AXIA profile tightly against the connectors.

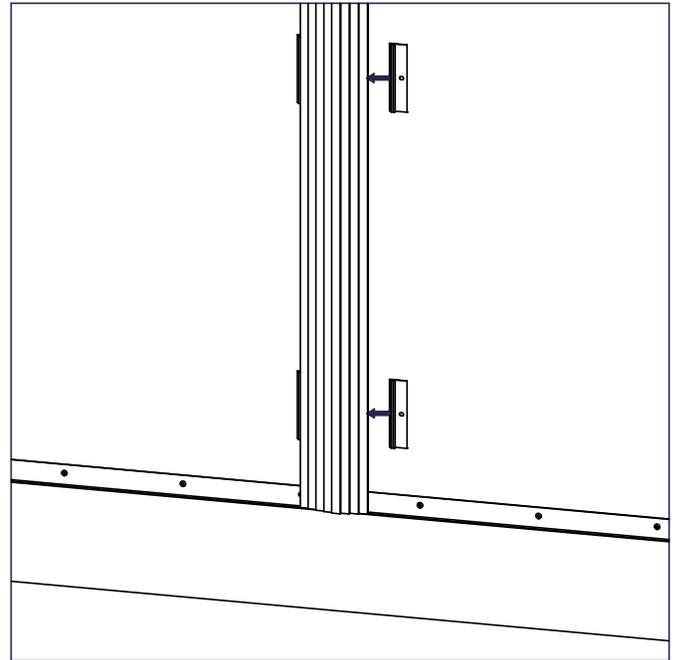

6) Secure the AXIA profile in place using Intermediate connectors. Make sure there is a tight fit between the connector and the profile before fastening the connector to the wall.

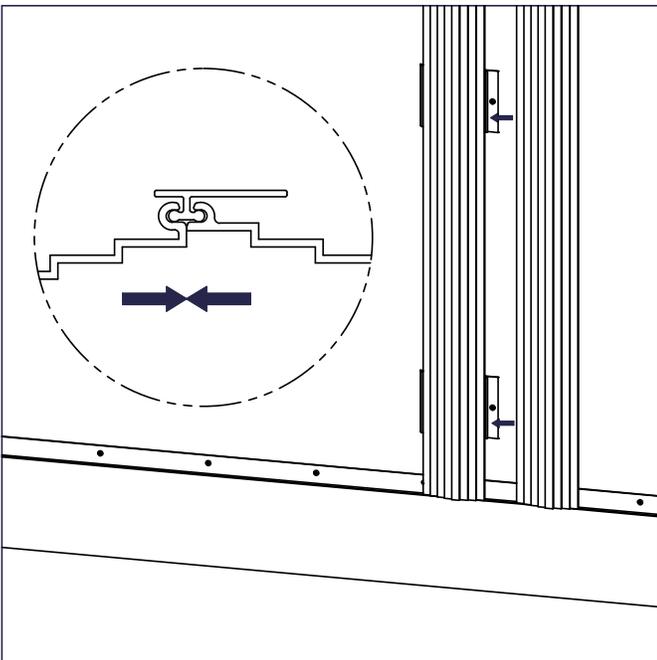


7) Repeat steps 4 and 5 as necessary to install additional profiles.

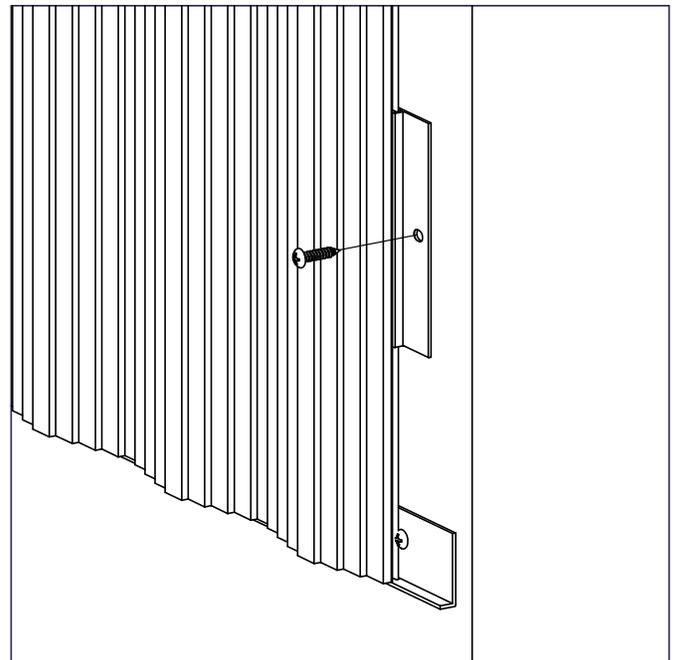


8) To secure the last profile, use the End Connectors.

Stylmark Installation Instructions: AXIA™ Aluminum Extrusion Profiles

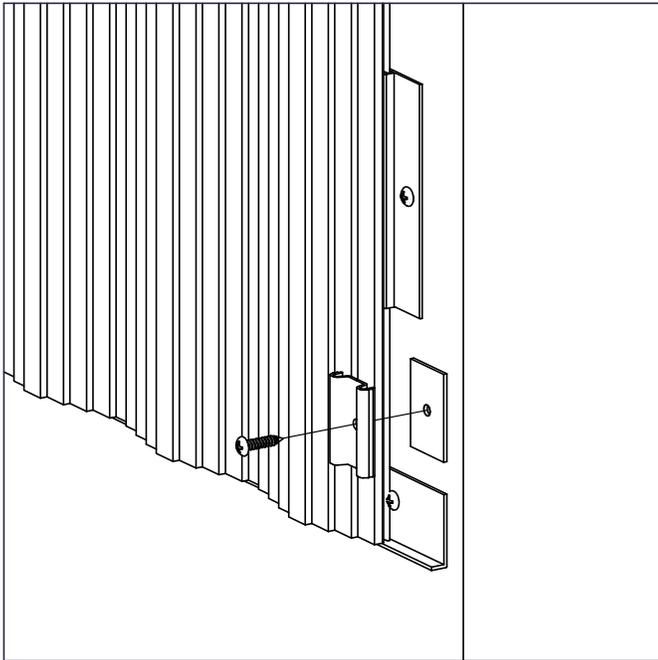


9) Fill the open gap on each end using Stylmark TrimMaker. Install plastic base clips and spacers 3-4" inches from each end and approximately 30-36" apart.

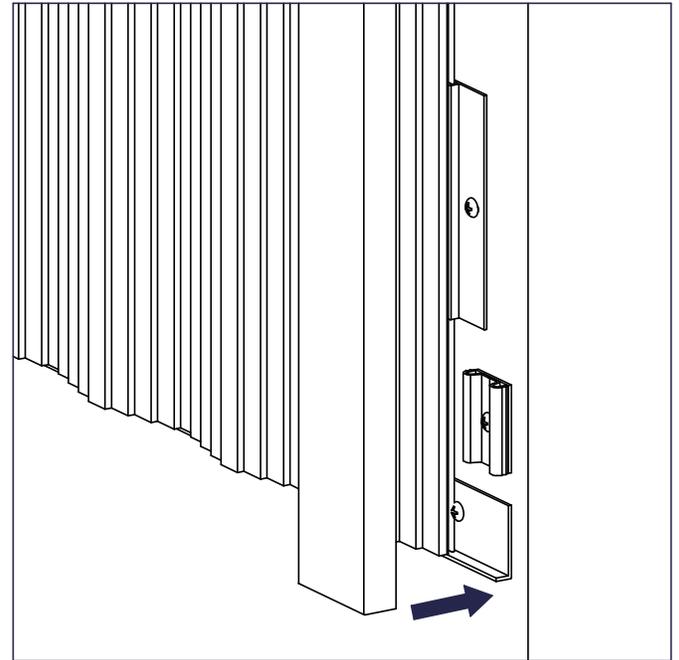


10) Snap TrimMaker extrusion in place. Call Stylmark if you have any questions or need more instructions.

Choose the Correct Connectors For Your Project


- Profile # 111100, Sonance_A
- Profile # 111101, Sonance_B
- Profile # 111103, Samsara
- Profile # 111104, Equalizer
- Profile # 111105, Ebb_A
- Profile # 111106, Ebb_B
- Profile # 111107, Gamma

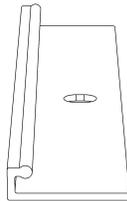

Starter
511212-030

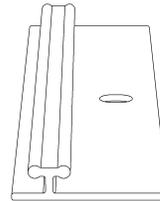


Intermediate
511213-030

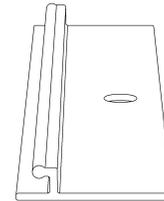


End
511214-030

* Kit 511215-030 is also available to order. This kit contains (1) 511212-030 Starters & (1) 511214-030 Ends.


- Profile # 111109, Concave

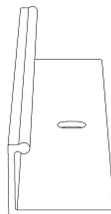

Starter
511219-030

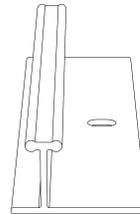

Intermediate
511220-030

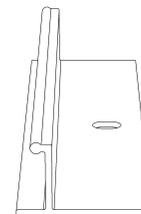

End
511221-030

* Kit 511222-030 is also available to order. This kit contains (1) 511219-030 Starters & (1) 511221-030 Ends.